

## Fitting Instructions: Roller Spring

### STEP 1



#### Fitting the blind

Brackets can be top, side or face fixed to any flat surface. Check that the rolled up fabric is not obstructed by the brackets.

### STEP 2

SPRING SIZE/ OPTION	ADDITIONAL MEASUREMENT
25mm Internal	20mm
25mm External	25mm
36mm Internal	32mm
36mm External	38mm

Figure 1

To calculate the positioning of the brackets use figure 1 to add the relevant spacing to the width of the blind fabric.

Install the brackets so that the measurement reflects the outside-to-outside distance of the brackets.

### STEP 3

#### Fitting the blind

a) Using external spring system

Make sure the blind fabric is completely rolled onto the roller tube. Fit the round pin end into the right hand bracket (figure 2).

Ensure enough pressure is kept on the pin end to prevent it being detached from the bracket and insert the spring end into the bracket (figure 3).

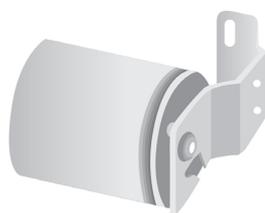


Figure 2

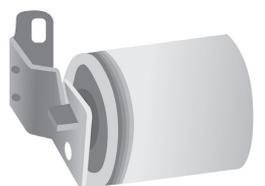


Figure 3

### STEP 4

b) Using Internal spring system

Make sure the blind fabric is completely rolled onto the roller tube. Fit the spring end into the straight edge bracket (figure 4).

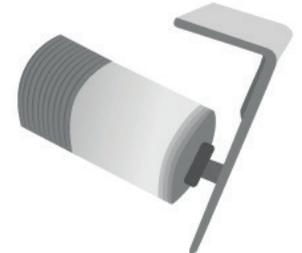


Figure 4

Insert the round plastic part into the round pin end (figure 5)

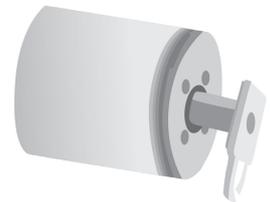


Figure 5

Ensure enough pressure is kept on the spring end to prevent it being detached from the bracket and slide the plastic part upwards into the bracket until you hear it click into position.



Figure 6

### INFORMATION

#### Tensioning the spring

If the fabric does not wind up completely when the blind is operated, greater spring tension can be applied as follows;

- Pull the blind down 250mm from its uppermost position and lock off
- Remove the blind carefully from the brackets ensuring the spring isn't unlocked and roll the material back onto the roller tube by hand.
- Replace the blind into the brackets and check for correct tension. If the tension is still insufficient, repeat above steps.

[Click here to shop cordless roller blinds](#)