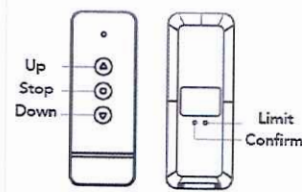
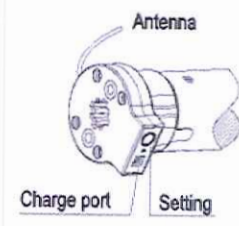
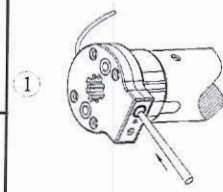
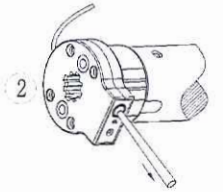
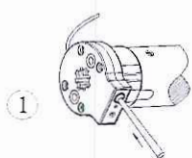
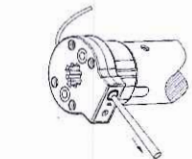
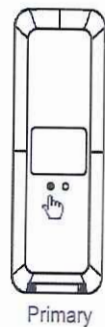
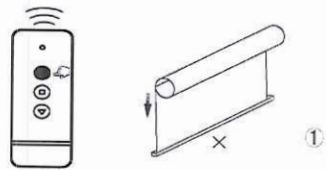
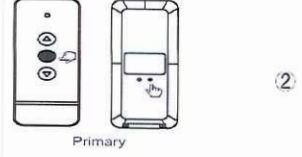


R1710 Rechargeable Battery Motor Instruction

Operation	Item	Operation	Result	Illustration
Technical data		Battery Specification: Li-ion Batter, 1400mAH, 7.4V. Motor Torque/Speed: 1.1Nm/25rpm or 0.7Nm/34rpm		
Set up the motor		<p>Please charge overnight before first use</p> <p>General Information Illustration shows the side of motor head with SETTING button facing you.</p> <p>● Motor antenna should be as straight as possible; otherwise, the receiving distance will be reduced.</p>		<p>Remote Transmitter</p>  <p>Motor</p> 
Delete original setting on motor	1	Press and hold SETTING button on motor mount.	The motor will jog 2 times firstly, then jog 3 times.	  <p>Press and hold Release it</p>
	2	Release the button	All the records have been deleted - motor reset	
Pairing remote transmitter with motor	1	Hold down the SETTING button on the motor mount	Motor jogs 2 times.	 <p>Press and hold</p>  <p>Release it</p>  <p>Primary</p>
	2	Please release this button when motor jogs.		
	3	Press the CONFIRM button on remote transmitter within 10 seconds	Motor jogs 2 times. Remote has now been paired with the motor.	
Changing motor rotation direction	1	Press UP button	If blind goes up the motor direction is ok. If the blind goes down then the motor direction should be changed.	 <p>1</p>  <p>2</p>
	2	Hold down LIMIT button and then press STOP button on the primary transmitter.	Hold both buttons until motor jogs - at this moment the motor rotation direction has been changed.	

Operation	Item	Operation	Result	Illustration
Setup bottom limit	1	Press and hold LIMIT button on primary transmitter	Motor jogs 2 times, then jogs 3 times.	
	2	Release the button	Motor is ready to set limits.	
	3	Press DOWN button on transmitter	Motor runs down	
	4	Press STOP button when motor gets close to the end-point of lower limit	Motor stops	
	5	Press DOWN button	Motor runs step by step to set lower limit accurately	
	6	Press CONFIRM button on transmitter	The motor jogs 2 times. The setting has completed.	
Setup upper limit	7	Press UP button on primary transmitter	Motor runs up	
	8	Press STOP button when motor running close to the upper stop point.	Motor stops	
	9	Press UP button	Motor runs step by step to adjust upper limit accurately.	
	10	Press CONFIRM button on transmitter	Motor jogs 2 times. The setting has completed.	
Charging	The motor works with Li-ion battery, please charge when the motor stops working or falters. Please charge the motor by charger. Charging time: Charger 5 to 6 hours.			
FAQ	<p>If motor does not work:</p> <ul style="list-style-type: none"> ● Please charge the motor battery first. ● If motor does not stop at the required point, then the stops must be reset. 			