


Fitting Instructions: Aluminium Venetian Blinds

STEP 1

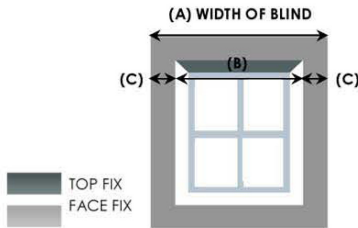


Outside Recess

- If the blind is to be fitted outside the window, ensure that measurement C is the same. C is simply equal to A minus B, divided by two. Follow instructions for FACE FIXING.

Inside Recess

- If TOP FIXING, fix to the lintel if the window is uPVC or if there are no obstructions. If FACE FIXING, fit bracket to window frame.

STEP 2




B: Bracket Locations
W: Wand Control

L: Ladder Control
C: Cord Control


Place the blind into position and tilt forward to show controls and ladder position. Brackets should be fitted at least 5cm from either side of ladder or wand control.

STEP 3

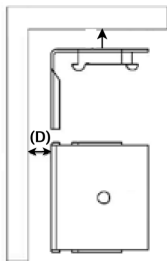

Top fixing – Standard Bracket


Measure and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Mark this measurement on the lintel and align the back of the bracket with this line. Fix the bracket into position using the fixing holes.

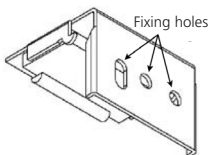

Face Fixing – Standard Bracket


Affix bracket using fixing holes.

STEP 3 (CONTINUED)

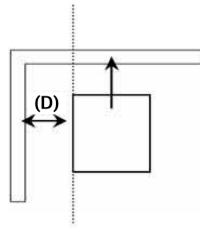

Top fixing – End Fix Bracket


Measure and mark the distance (D), allowing for obstructions like handles that protrude into the recess area. Mark this measurement on the lintel and align the back of the bracket with this line. Fix the bracket into position using the fixing holes.

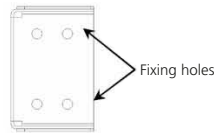

Face Fixing – End Fix Bracket


Position the bracket and fix using holes shown.

STEP 4

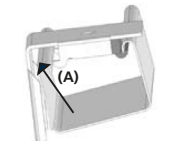


Standard Bracket

Fit the headrail onto the spring loaded clips at the front of the brackets.




Press the headrail towards the brackets to depress the front bracket clips, then rotate the back of the headrail upwards to click into place.

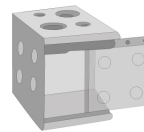

End Fix Bracket

First remove the end caps at either end of the headrail, then place each end of the headrail into the end fix brackets. Finally slide the bracket covers into position.

REMOVING THE BLIND

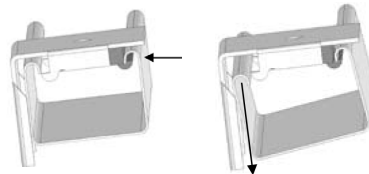


For each bracket, starting from one end of the blind:

- 1) Press the headrail firmly towards the bracket.
- 2) Tilt the headrail down at the back, to clear the rear catches.
- 3) Keeping the headrail tilted, pull headrail towards you to clear the front catches.
- 4) Repeat for the next bracket, ensuring that the headrail is adequately supported at the free end.

Safety Cleat Fitting Instructions


Step 1

- Place safety cleat in the desired location on the wall and mark the position of the two holes using a pencil.
- We recommend position the cleat to either side of the blind and out of the reach of children.

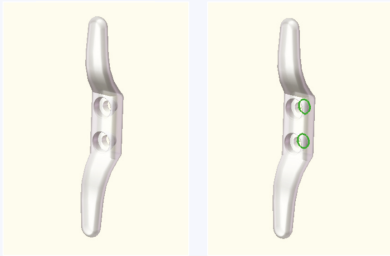


Step 2

- Remove the safety cleat and drill the positions marked.
- Once the holes are drilled place a Rawlplug into the holes.
- Use the screws provided to attach the safety cleat to the wall.

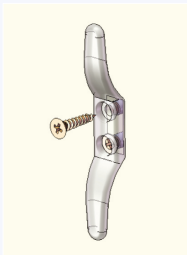

Step 3

- We recommend that the cord is wrapped around the safety cleat when the blind is not in use, as shown in the pictures below.

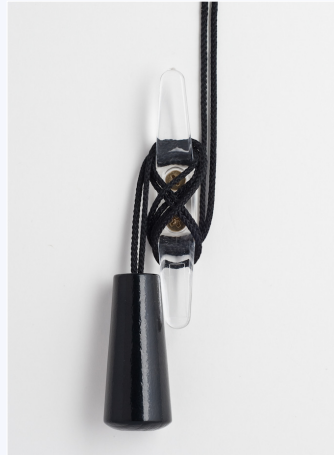

WARNING

Young children can strangle in the loop of pull cords, chains, tapes that operate window coverings. They can also wrap the cords around their necks. To avoid the risk of strangulation and entanglement, keep cords out of the reach of young children. Move beds, cots and furniture away from window covering cords.

