
Wooden Blind Fitting Instructions



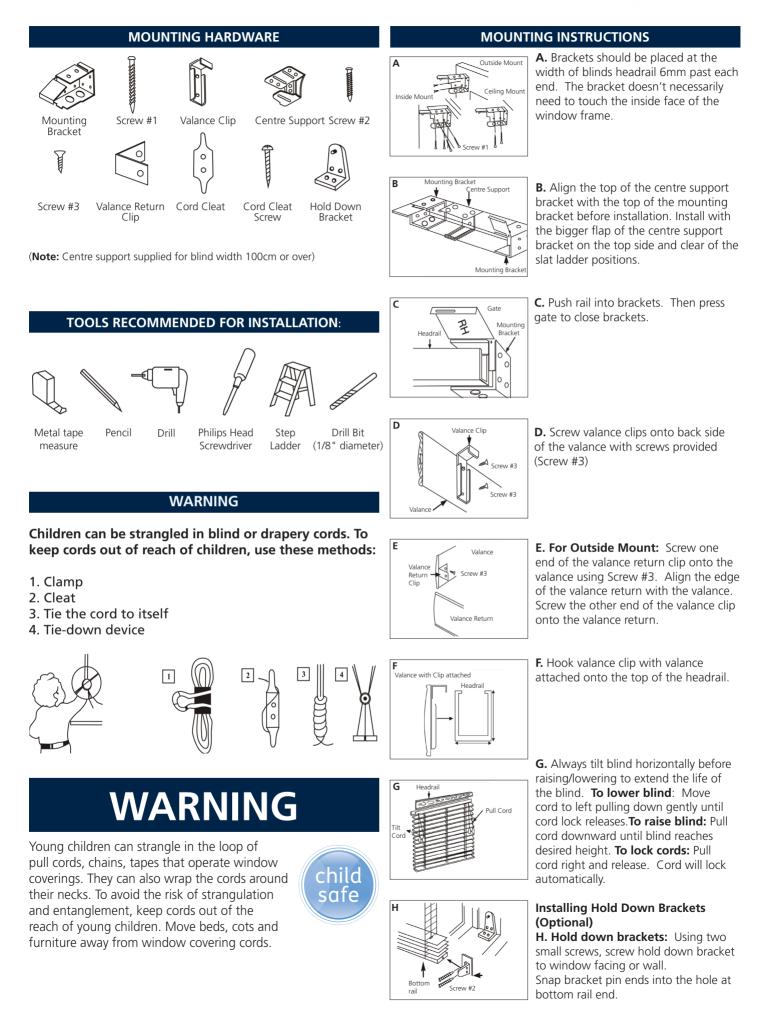

Wooden Blind Fitting Instructions


WARNING

Reduce risk of strangulation to infants and toddlers. Position safety cord-stops before using blinds.

SAFETY CLEAT FITTING INSTRUCTIONS

STEP 1

TO POSITION SAFETY CORD-STOPS:



1. Install blind as directed by manufacturer making sure headrail is securely fastened. Lower blind to maximum desired length and lock into place.

2. Measure the distance

from headrail to cord-stops.

needed. Your blind is ready

3. If cord-stops ARE NOT

untie) the knot surrounding

4. Push both the cord-stop

the cord-stop is 2.5cm to 5cm below the headrail. Hold cord-stop in place and pull firmly on lift cord to retighten knot. Repeat steps 2, 3 & 4 for each cord-stop.

and the loosened knot toward the headrail until

2.5cm to 5cm below headrail loosed (but do not


the cord-stop.


If cord-stops are 2.5cm to

5cm below the headrail no further adjustment is

to be used.

2.5-5 cm





(**Note:** Use of hold down bracket is recommended to fully utilise the safety feature of the cord-stops)



- Place safety cleat in the desired location on the wall and mark the position of the two holes using a pencil.
- We recommend position the cleat to either side of the blind and out of the reach of children

STEP 2



- Remove the safety cleat and drill the position marked Once the holes are drilled place a rawplug into the holes
- Use the screws provided to attach the safety cleat to the wall

STEP 3



• We recommend that the cord is wrapped around the safety cleat when the blind is not in use, as shown in the pictures below.

RECOMMENDED CARE FOR WOODEN BLINDS

1. When opening or closing blind only raise or lower the blind when the slats are in the horizontal (open) position. Larger blinds must be raised or lowered in stages. Raising or lowering in one singular motion places excessive stress on the mechanism, strings and brackets.Do not force the cord when tilting the blinds, this may cause the mechanism to break.

2. It is not recommended that wooden blinds be fitted in damp or wet environments as warpage may occur.

4. If the blind becomes damp or wet, wipe down immediately. The slats should be horizontal (open) and the blind released and lowered completely. Allow to dry by removing the blinds from the brackets and lay down on a hard surface. Do not place in direct sunlight as excessive heat may cause the slats to warp. If the blinds are excessively wet do not place the blinds on a surface that may absorb any stain.

5. This wooden blind does not require any oiling.

If you have any doubts about the care or maintenance of your wooden blind do not hesitate to contact your nearest supplier for advice.

3. Dust blinds regularly.