


Roller Blinds

0161 451 0290

Tips:
Use a metal tape measure to ensure accurate measurements

Roller Blind Bracket Protrusion:
Top Fixed: 50mm
Face Fixed: 70mm

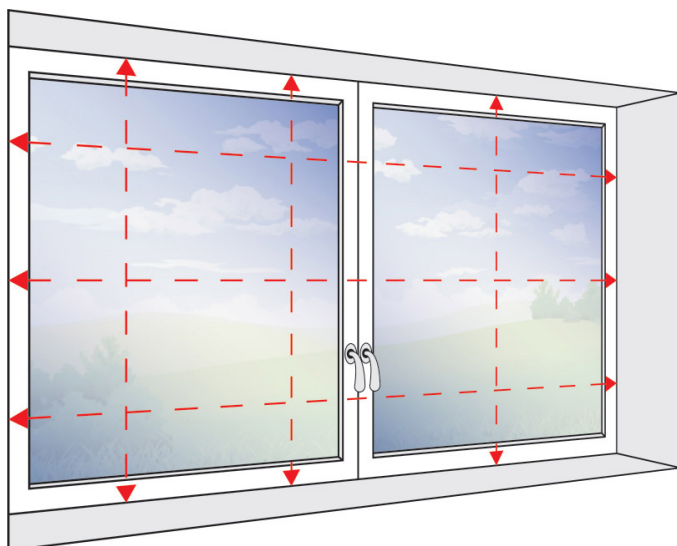


Recess Size (for fitting inside the window recess)

Measure the width at the top of the recess where the roller is to be fitted and the drop from the top of the recess to the bottom.

Do not deduct anything off the sizes approximately 10mm will be deducted from the width during the manufacturing process to make sure it fits properly.

Roller blind fabric is approx 35mm narrower than the full blind size so if you have tiles at the bottom of the recess ensure this gives

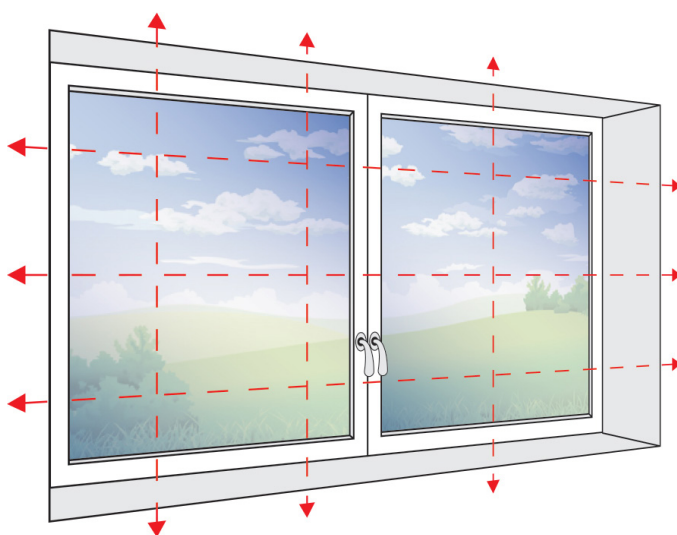

Exact Size (for fitting outside the windows recess or if you know the size of the blinds you require including the brackets)

Measure the exact size you want the finished blind size to be including the brackets.

Tip: Add on at least 10cm (4") to the recess width to allow for the overlap. Add 5cm (2") to the drop for the top plus and further required overlap for the bottom taking into account any obstructions such as radiators.

Remember the fabric on roller blinds is approximately 35mm narrower than the overall blind size so allow for this when measuring the overlap.

If you know the size of the roller blind you require