

## Roman Blinds

0161 451 0290


**Tips:**

Use a metal tape measure to ensure accurate measurements.

Roman Blinds height with bracket width is 45mm

**Identify your bay window type**

**Angled Bay**

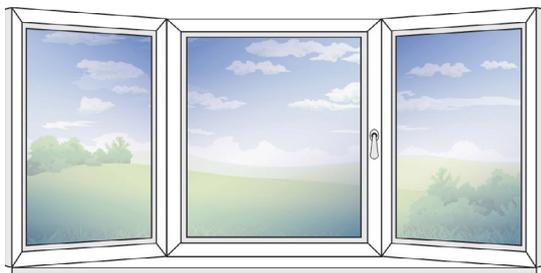

see angled bay instructions below

**Boxed / Square Bay**



see boxed / square bay instructions

### Angled Bay Window Measuring Instructions


1

If you have window handles measure how far out they protrude, then add this to the allowance for the bracket in the table at the top of the page. Note the size down, this will be referred to as X.


$$X = \text{window handle size} + \text{bracket size}$$

Place the two pieces of paper next to each other and mark a line at measurement X.

Shade in to mark frame side of paper

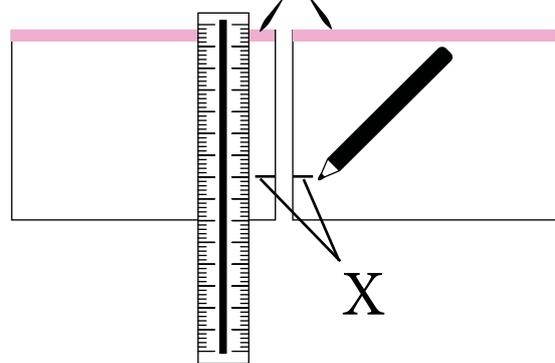

2

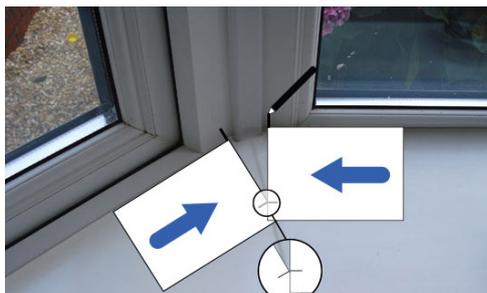


1) Place the pieces of paper on the window sill touching the frame and slide together until the two lines meet.

2) Then using a pencil make a mark on the window sill at the point where the corner of the fabric meets the frame.

3) Repeat on the other angles around the bay.

3

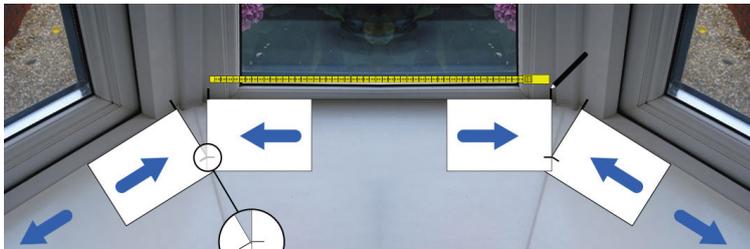

Measure from one mark to the next as shown on the illustration.

This will give you the widths the blinds will need to be.

Order all blinds as **EXACT SIZE**.  
**no deductions will be made**

4


#### Drop

For the drop measure from where the bracket is to be fitted to the window sill.

Order all blinds as **EXACT SIZE**. ( no deductions will be made )

## Box / Square Bay Window Measuring Instructions

1

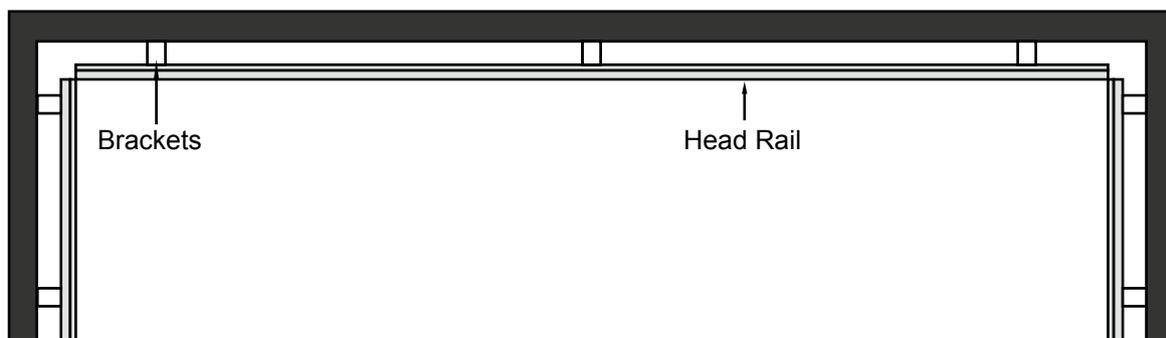

2

This method will ensure that the 3 blinds almost meet in the corners.

#### WIDTH

- 1) Measure the full width of all 3 windows into the corners, note the sizes down.
- 2) Deduct 9cm ( 90mm ) from the full front width. This allows for the space taken up by the side blinds.
- 3) Deduct 4.5cm ( 45mm ) from the full width of each side blind. This allows for the space taken by the front blind.
- 4) Order all 3 blinds as EXACT SIZE.

#### DROP

Firstly make sure you have at least 30mm clear on the surface you are mounting the blinds to. On a bay window you need to order all 3 blinds at the same drop even if one window is longer than the others.

Measure from the point where the bracket is to be fitted to the window sill and use the smallest of the three as your drop.