

Vertical Blinds

0161 451 0290

Tips:


Use a metal tape measure to ensure accurate measurements

Brackets:

Top Fix: fitted into the top recess, 75mm away from window frame

Small Face Fix: fitted to the window frame, 75mm protrusion from fixing point (not for use with 127mm slats)

Large Face Fix: fitted to the window frame, 110mm protrusion from fixing point

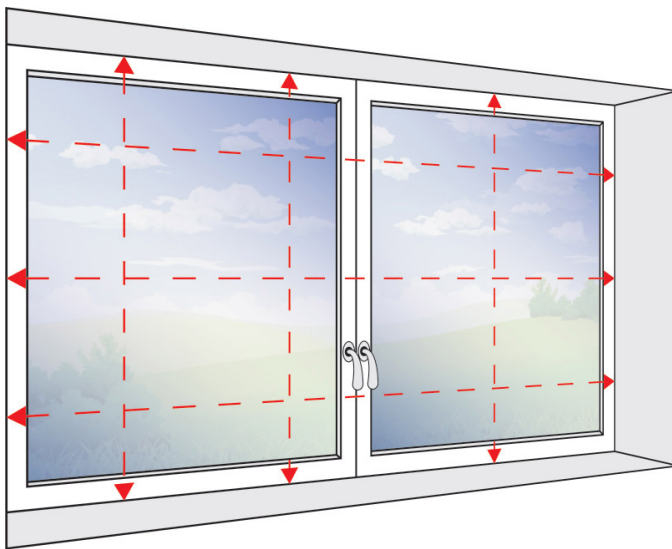


Recess Size
(for fitting inside the window recess)

Measure the width at the top of the recess where the head rail is to be fitted.

The drop is measured from the recess at the top to the window sill.

Do not deduct anything from the size. We will 10mm from the width & drop during the manufacturing process to ensure it fits properly.

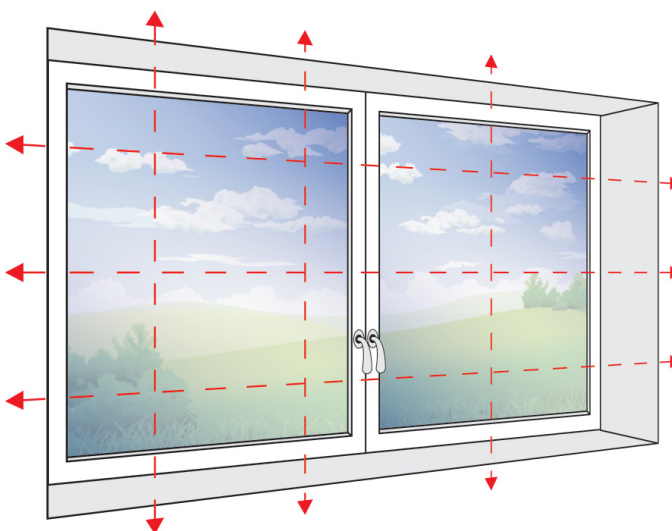

Exact Size
(for fitting outside the windows recess or if you know the size of the blinds you require including the brackets)

Measure the exact size you want the finished blind size to be.

Tip: Add on at least 10cm (4") to the recess width to allow for the overlap. Add 5cm (2") to the drop for the top plus and further required overlap for the bottom taking into account any obstructions such as radiators.

This size will be the exact size the blind is made to.