

Cordless Roller Blinds Measuring Instructions


Recess

Measure the wall to wall width at the top of the recess and the drop from the top recess to the window sill.

Do not make any deductions, we will do this during manufacture.

Approximately 5mm from the width to ensure a comfortable fit.

You can order in inches, cm or mm.

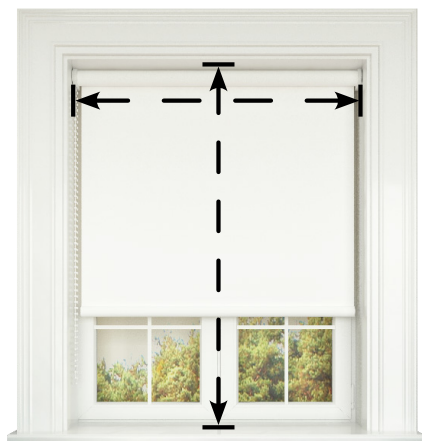


Bracket to Bracket

Measure the existing blind brackets from the outside of the left one to the outside of the right one.

The blind will be made to these exact sizes. The fabric width will be approximately 35mm narrower than the size given.

You can order in inches, cm or mm.

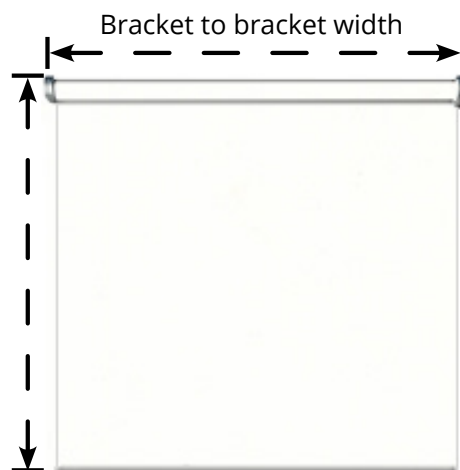


Part Tiled Recesses

Measure the full width at the top of the recess then the width between the tiles.

If the difference is less than 25mm as it will be in most cases then use the measurement at the top as there will be enough clearance for the fabric and order as recess size.

e.g.

Roller blind fabric is approximately 35mm narrower than the overall width of the blind including brackets.

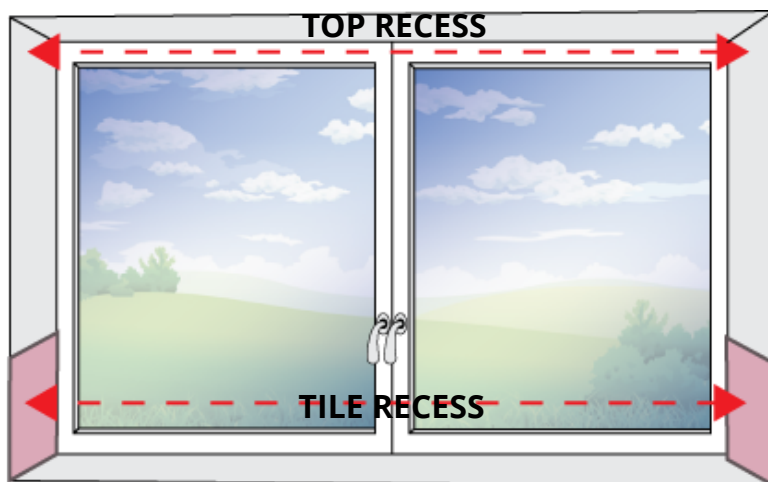

Top Recess - Tile Recess Difference: Less Than 25mm

Top recess width: 1000mm

Tile recess width: 975mm

Difference: 25mm

Order blind Recess Size 1000mm as fabric width will be 965mm

Top Recess - Tile Recess Difference: More Than 35mm

Top recess width: 1000mm

Tile recess width: 965mm

Difference: 35mm

Order blind Recess Size 985mm as fabric width will be 950mm

N.B. THE WIDTH OF THE FABRIC WILL BE ABOUT 35MM NARROWER THAN THE OVERALL BRACKET TO BRACKET SIZE OF THE BLIND

Blinds are produced within an operating tolerance of +/-3mm (width) and +/-5mm (drop)

***For detailed measuring instructions including how to measure for Bifolding Doors Patio & French Doors and Bay Windows click on the [Measuring & Fitting Guide](#) tab lower down the page.**