

# Wooden Venetian Blinds Measuring Instructions


## Recess

Measure the wall to wall width at 3 places and the drop from the top recess to the window sill. Note down the smallest of each of the 3 measurements.

Do not make any deductions, we will do this during manufacture.

Approximately 10mm from the width and the drop to ensure a comfortable fit.

You can order in inches, cm or mm.

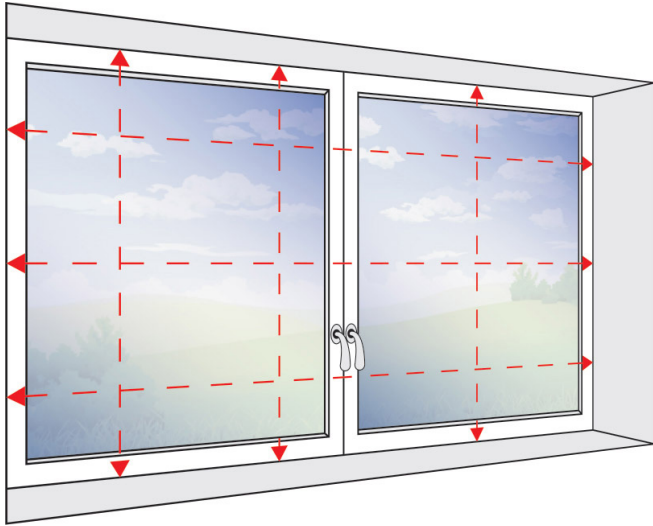


## Exact

Measure the wall to wall width at 3 places and the drop from the top recess to the window sill. Add on 30cm to the width and drop to allow for sufficient overhang.

The blind will be made to these exact sizes from the top of the track to the bottom of the fabric.

You can order in inches, cm or mm.

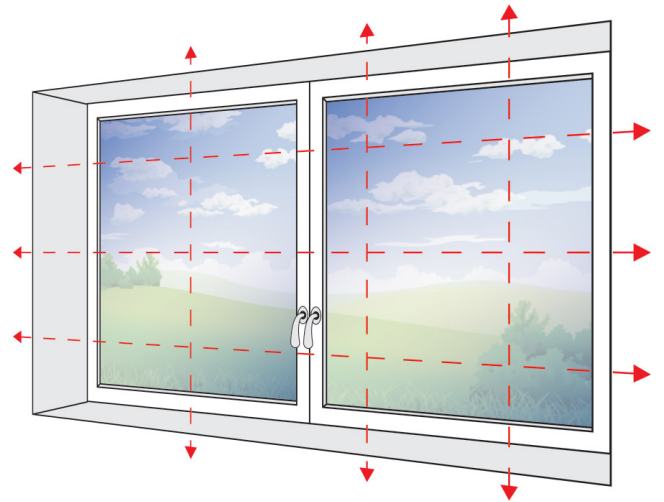


## Part Tiled Recesses

Measure the full width at the top of the recess then the width between the tiles.

If the difference is less than 25mm as it will be in most cases then use the measurement at the top as there will be enough clearance for the fabric and order as **recess size**.


If the difference is more than 25mm then use the tiles recess size for the width and order as **recess size**.

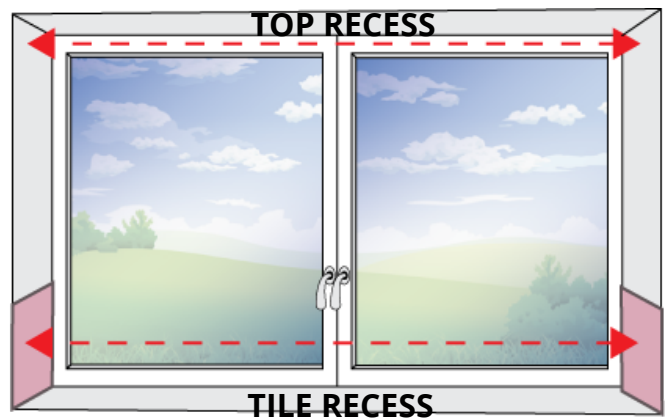


## Brackets

Use the guide below for the sizes of the available brackets to make sure there is sufficient room to fit them.

**25mm/35mm  
Slat Sizes**

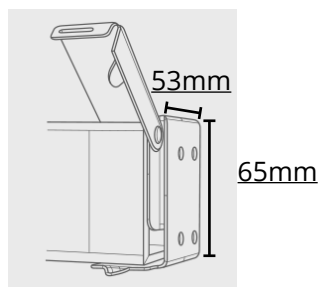

**50mm  
Slat Sizes**

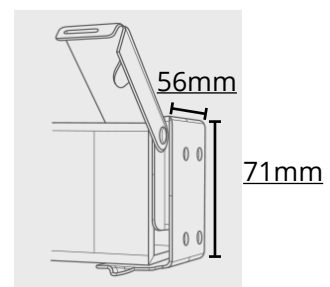

\*For **detailed measuring instructions** including how to measure for Bifolding Doors Patio & French Doors and Bay Windows click on the **Measuring & Fitting Guide** tab lower down the page.